




Einbauanleitung Elektrosatz
Anhängervorrichtung mit 13-P Steckdose
lt. DIN/ISO Norm 11446


Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 11446 prise 13-P

Fitting instructions electric wiringkit
towbar with 13-P socket up to
DIN/ISO norm 11446

Montage-handleiding elektrokabelset voor
trekhaak met 13-P contactdoos
vlgs. DIN/ISO norm 11446

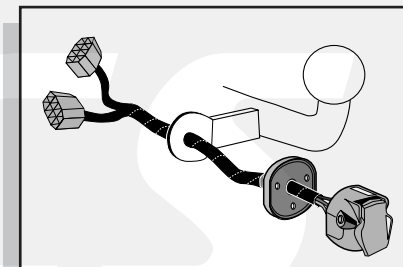

MITSUBISHI SPACERUNNER 2000-

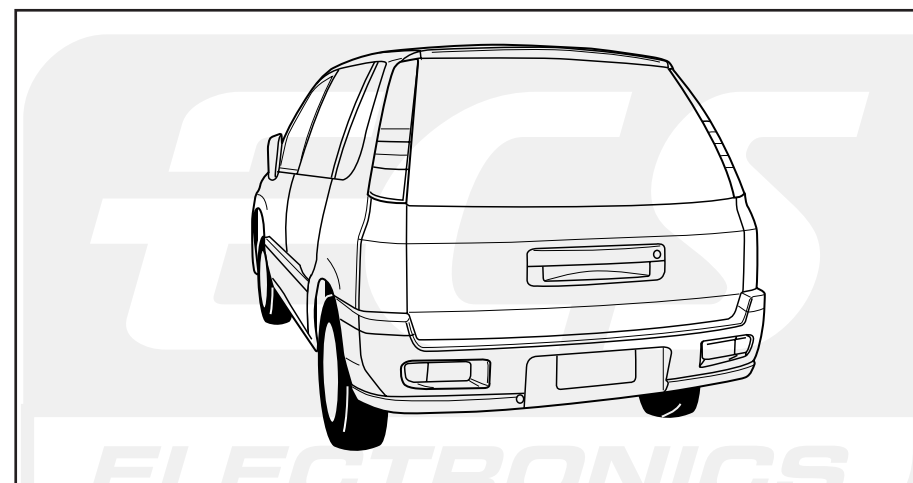



MT-003-HL






* Teilliste

* Liste de pieces



* Part list

* Onderdelenlijst

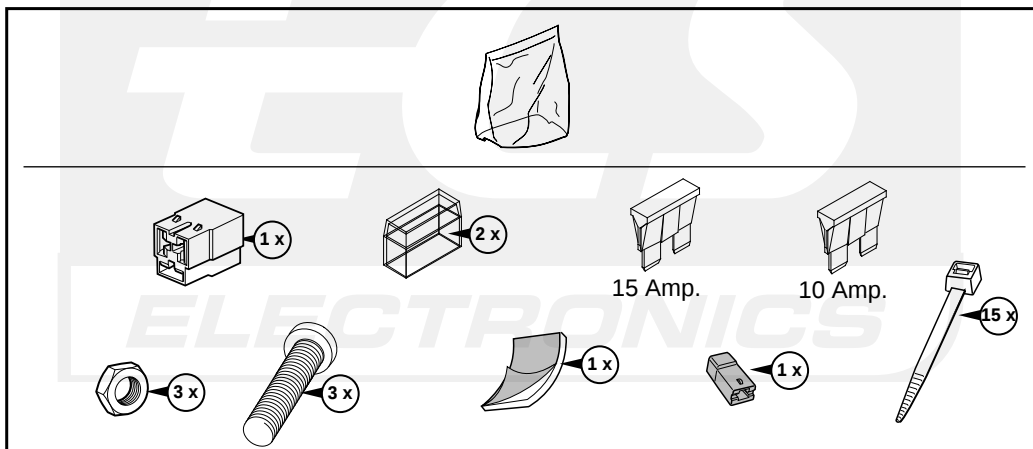
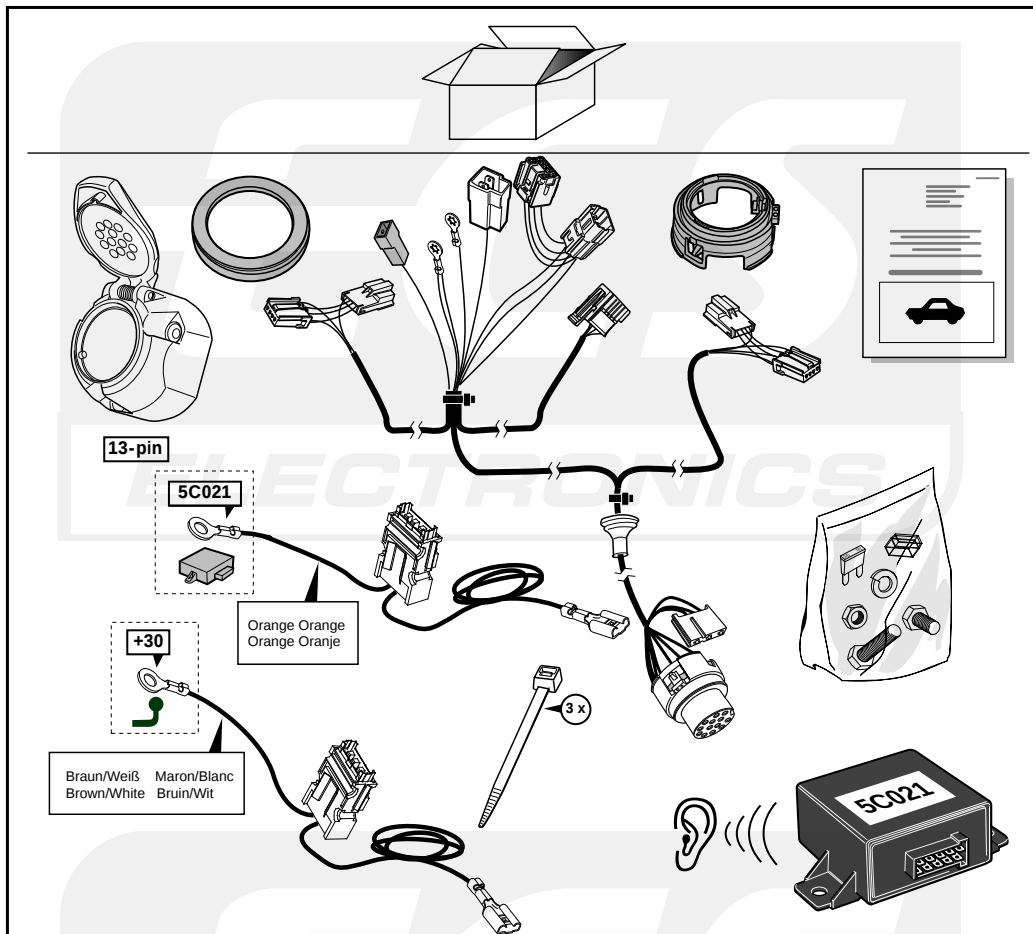


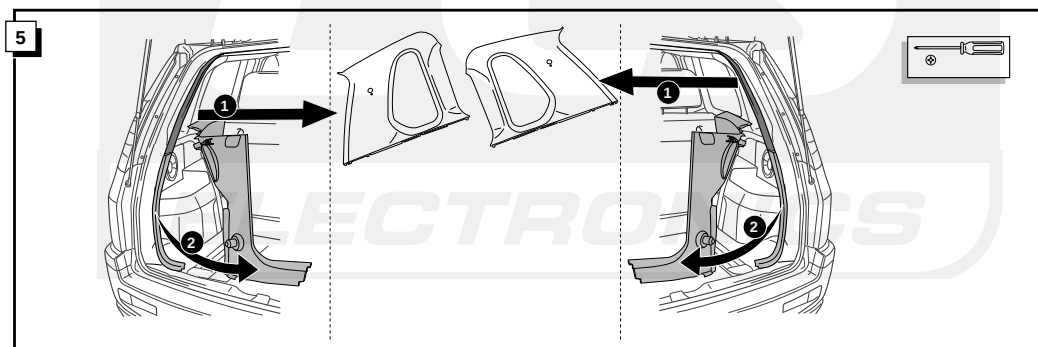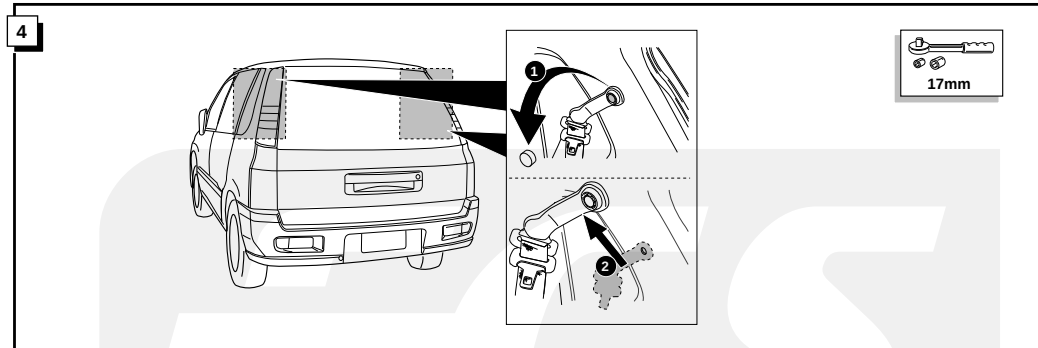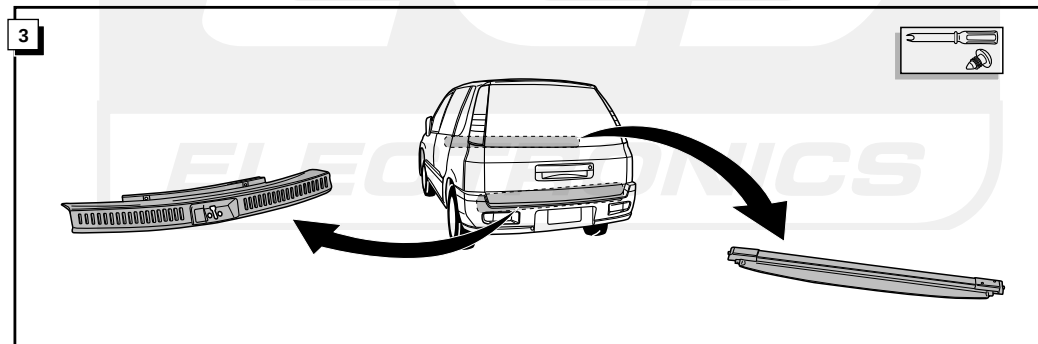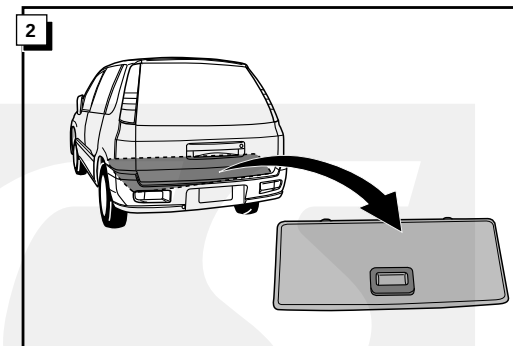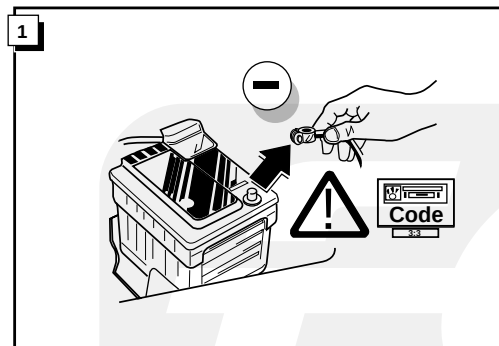



6

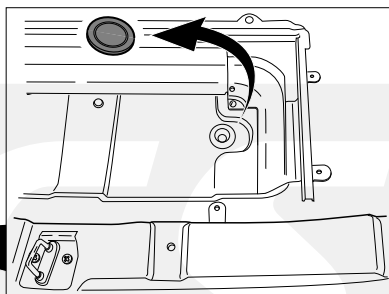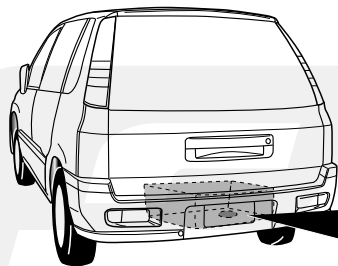


INFO

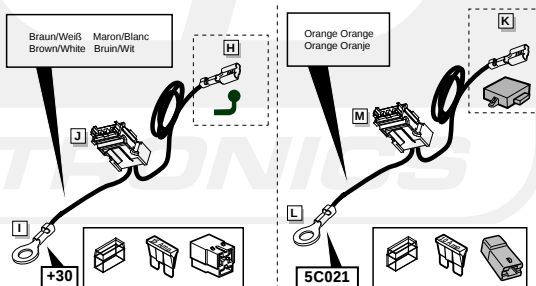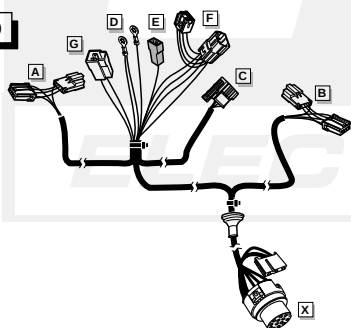


7

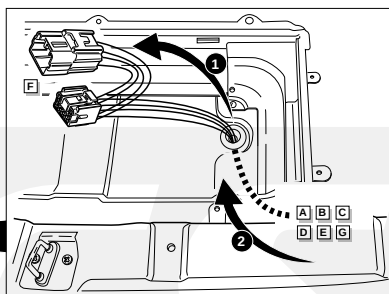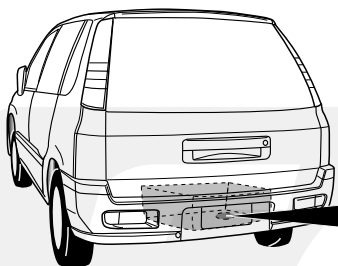


ROUTING

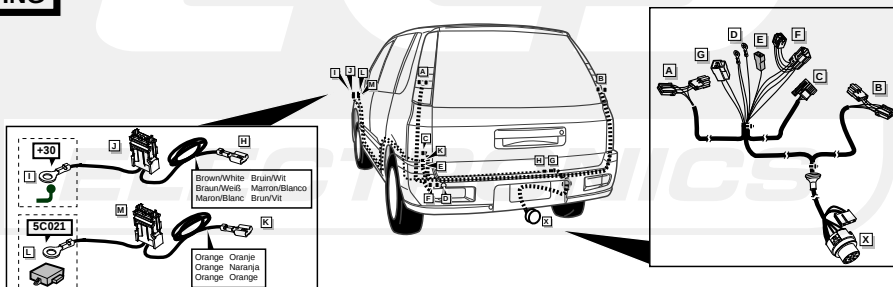


25

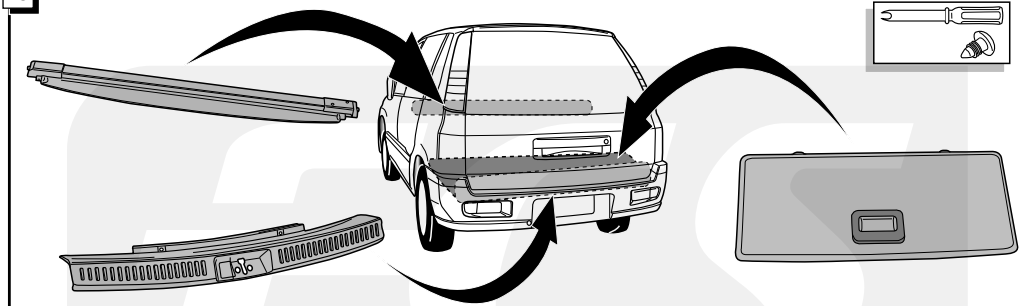


8

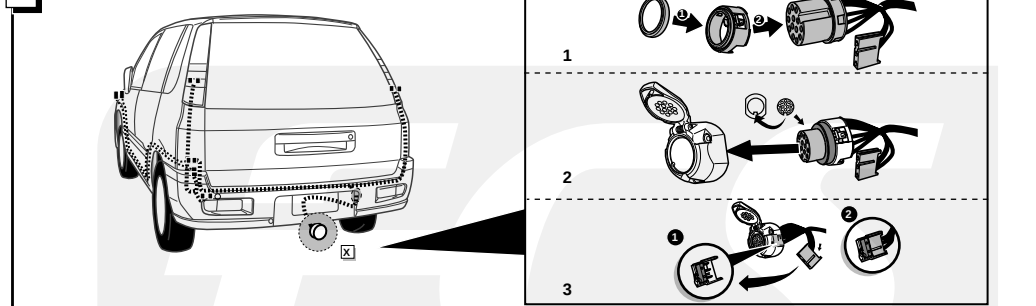


9

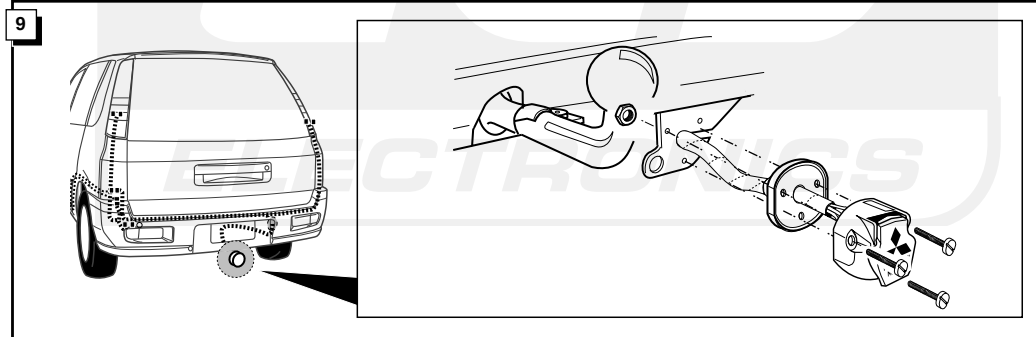


10

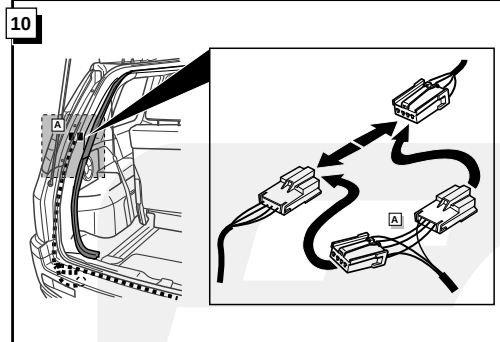

11

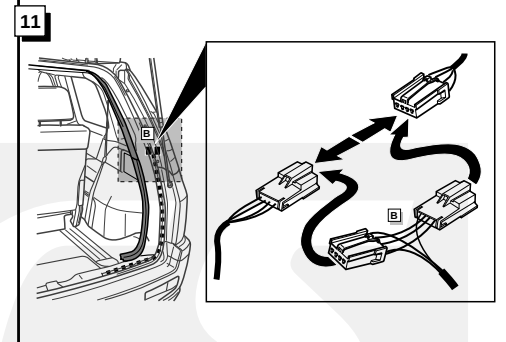

12

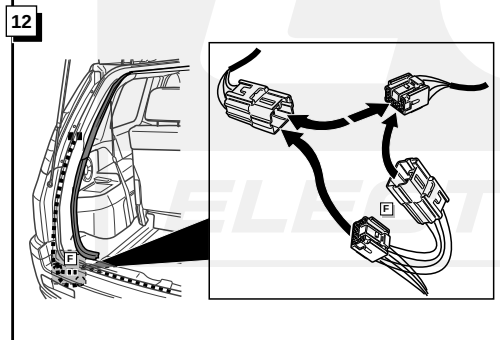

13

