




**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlgs. DIN/ISO norm 1724**


**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**

**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**









**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme DIN/ISO 1724
prise 12-N**

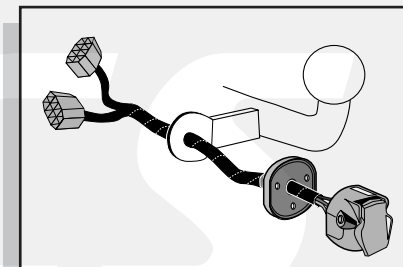

MITSUBISHI WAGON/ SPACE RUNNER 1992-

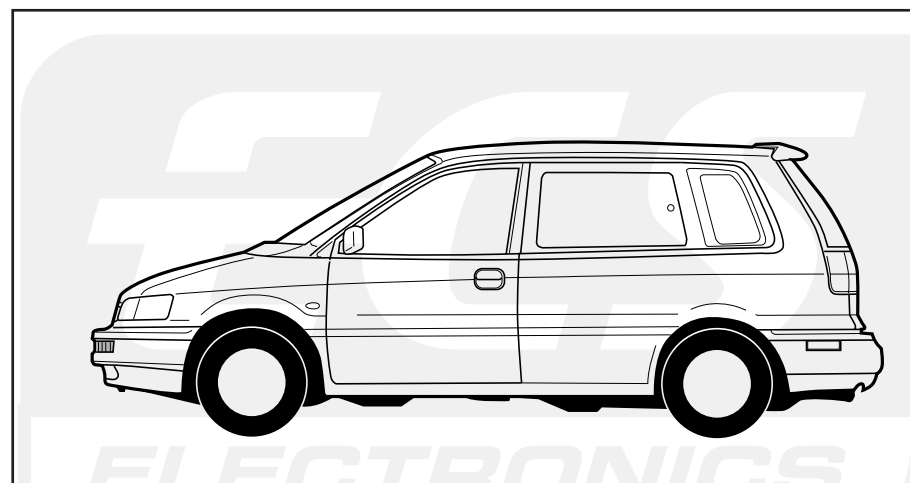

Bestel Nr.: MIT-045-B

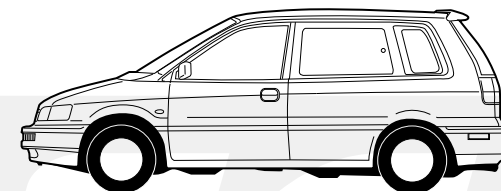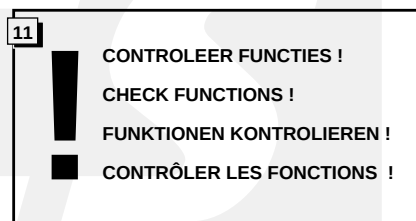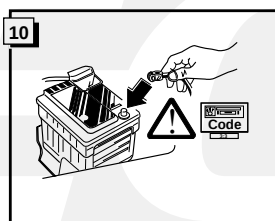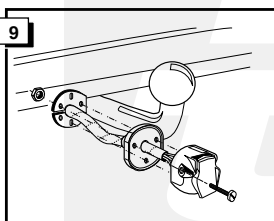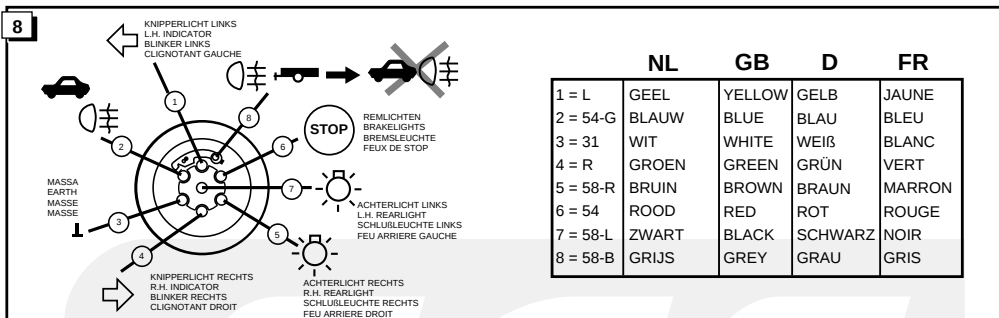
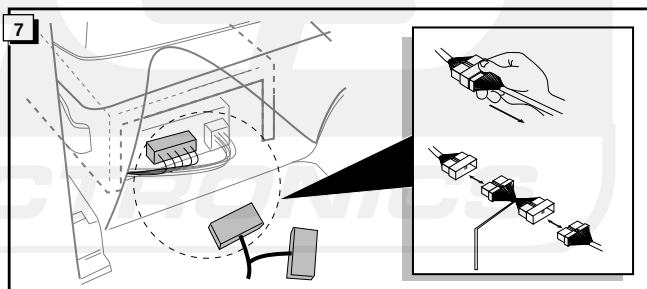
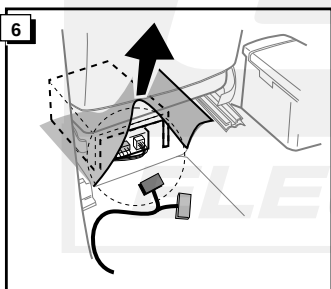
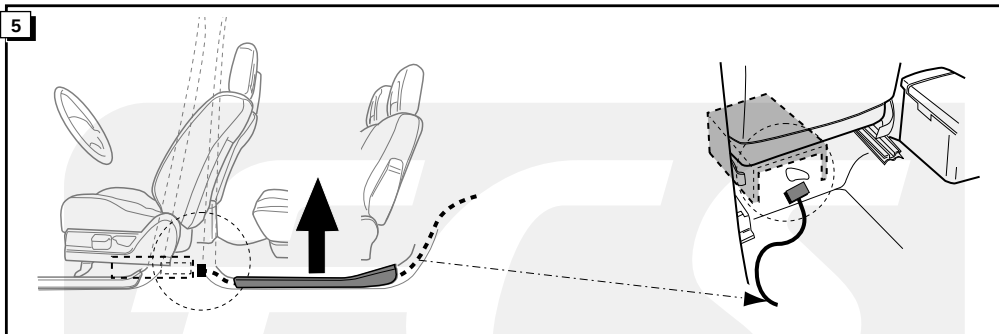





SPACE-RUNNER



ISO NORM 1724

- NL** Inbouwhandleiding v.a. model '92 / Bladzijde 1-2
UK Installation instructions from model '92 / Page 1-2
D Einbauanleitung vom Model '92 / Seite 1-2
F Instructions de montage depuis a.m. '92 / Page 1-2

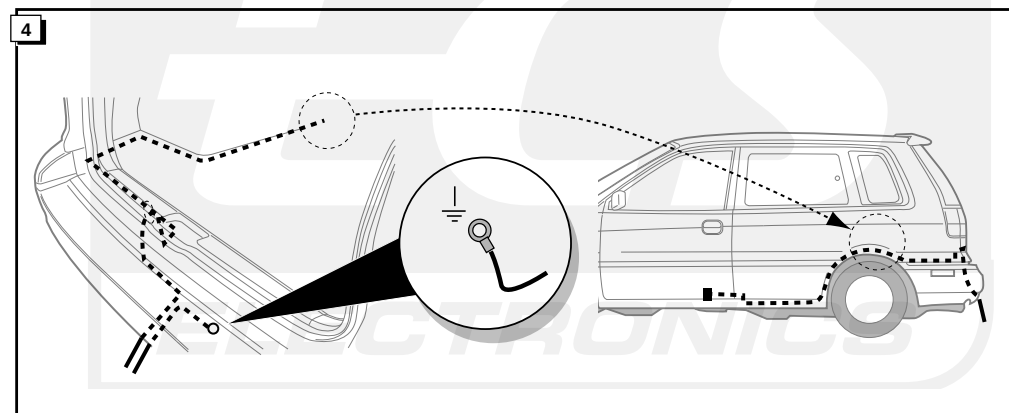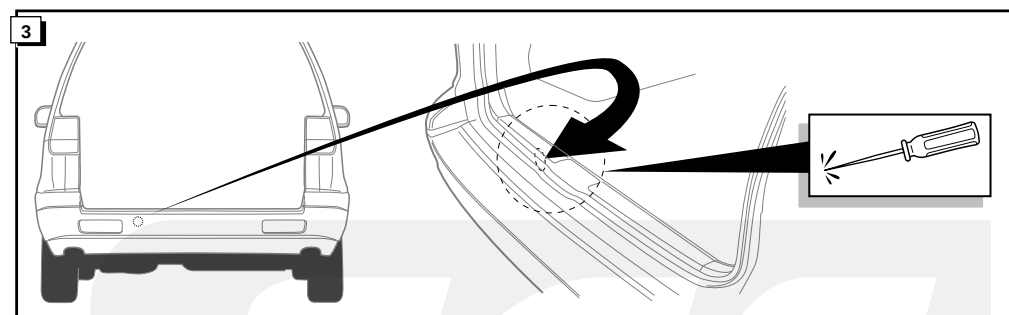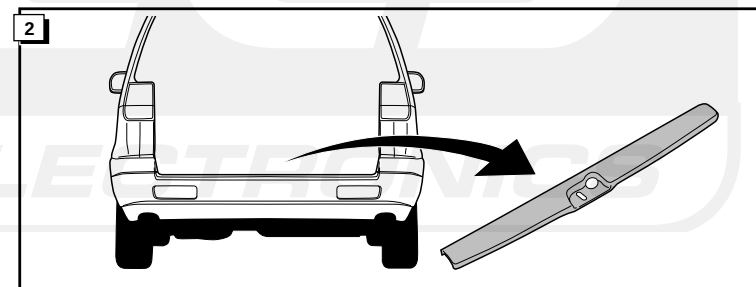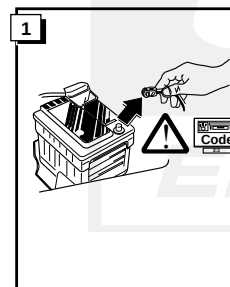

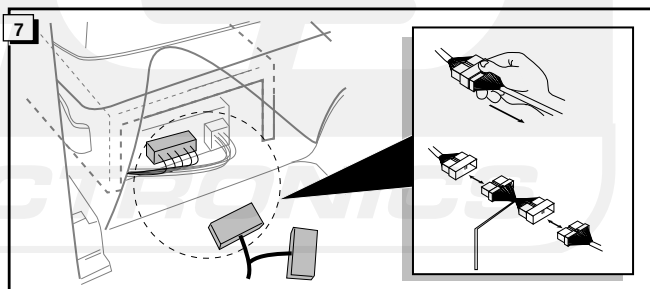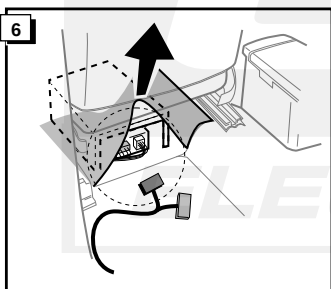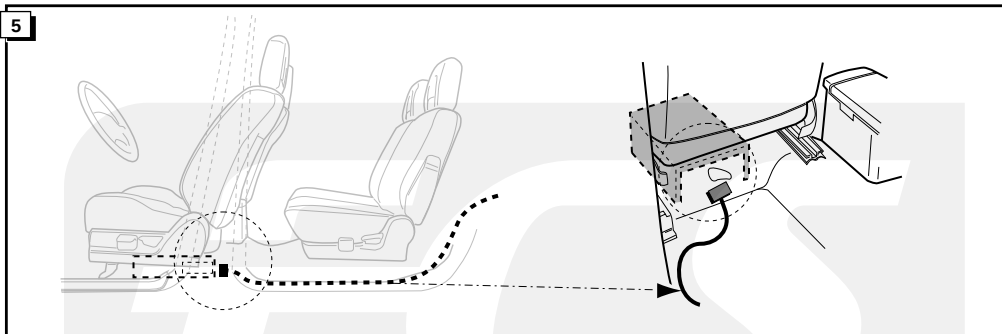

8

KNIPPERLICHT LINKS
L.H. INDICATOR
BLINKER LINKS
CLIGNOTANT GAUCHE

REMLICHTEN
BRAKELIGHTS
BREMSLEUCHTE
FEUX DE STOP

MASSA
EARTH
MASSE



1 2 3 4 5 6 7 8

ACHTERLICHT LINKS
L.H. REARLIGHT
SCHLUßLEUCHTE LINKS
FEU ARRIERE GAUCHE

KNIPPERLICHT RECHTS
R.H. INDICATOR
BLINKER RECHTS
CLIGNOTANT DROIT

ACHTERLICHT RECHTS
R.H. REARLIGHT
SCHLUßLEUCHTE RECHTS
FEU ARRIERE DROIT

	NL	GB	D	FR
1 = L	GEEL	YELLOW	GELB	JAUNE
2 = 54-G	BLAUW	BLUE	BLAU	BLEU
3 = 31	WIT	WHITE	WEIß	BLANC
4 = R	GROEN	GREEN	GRÜN	VERT
5 = 58-R	BRUIN	BROWN	BRAUN	MARRON
6 = 54	ROOD	RED	ROT	ROUGE
7 = 58-L	ZWART	BLACK	SCHWARZ	NOIR
8 = 58-B	GRIJS	GREY	GRAU	GRIS

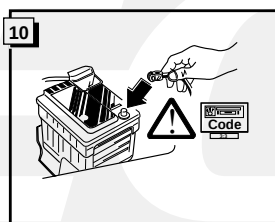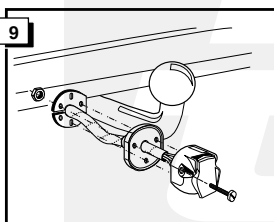

11

! CONTROLEER FUNCTIES !
CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
■ CONTRÔLER LES FONCTIONS !

